




# Anker 2.4G Wireless Mouse Left and Right Button Replacement

This guide will show you how to disassemble the Anker mouse to replace the left and right buttons.

Written By: Vincent Lee

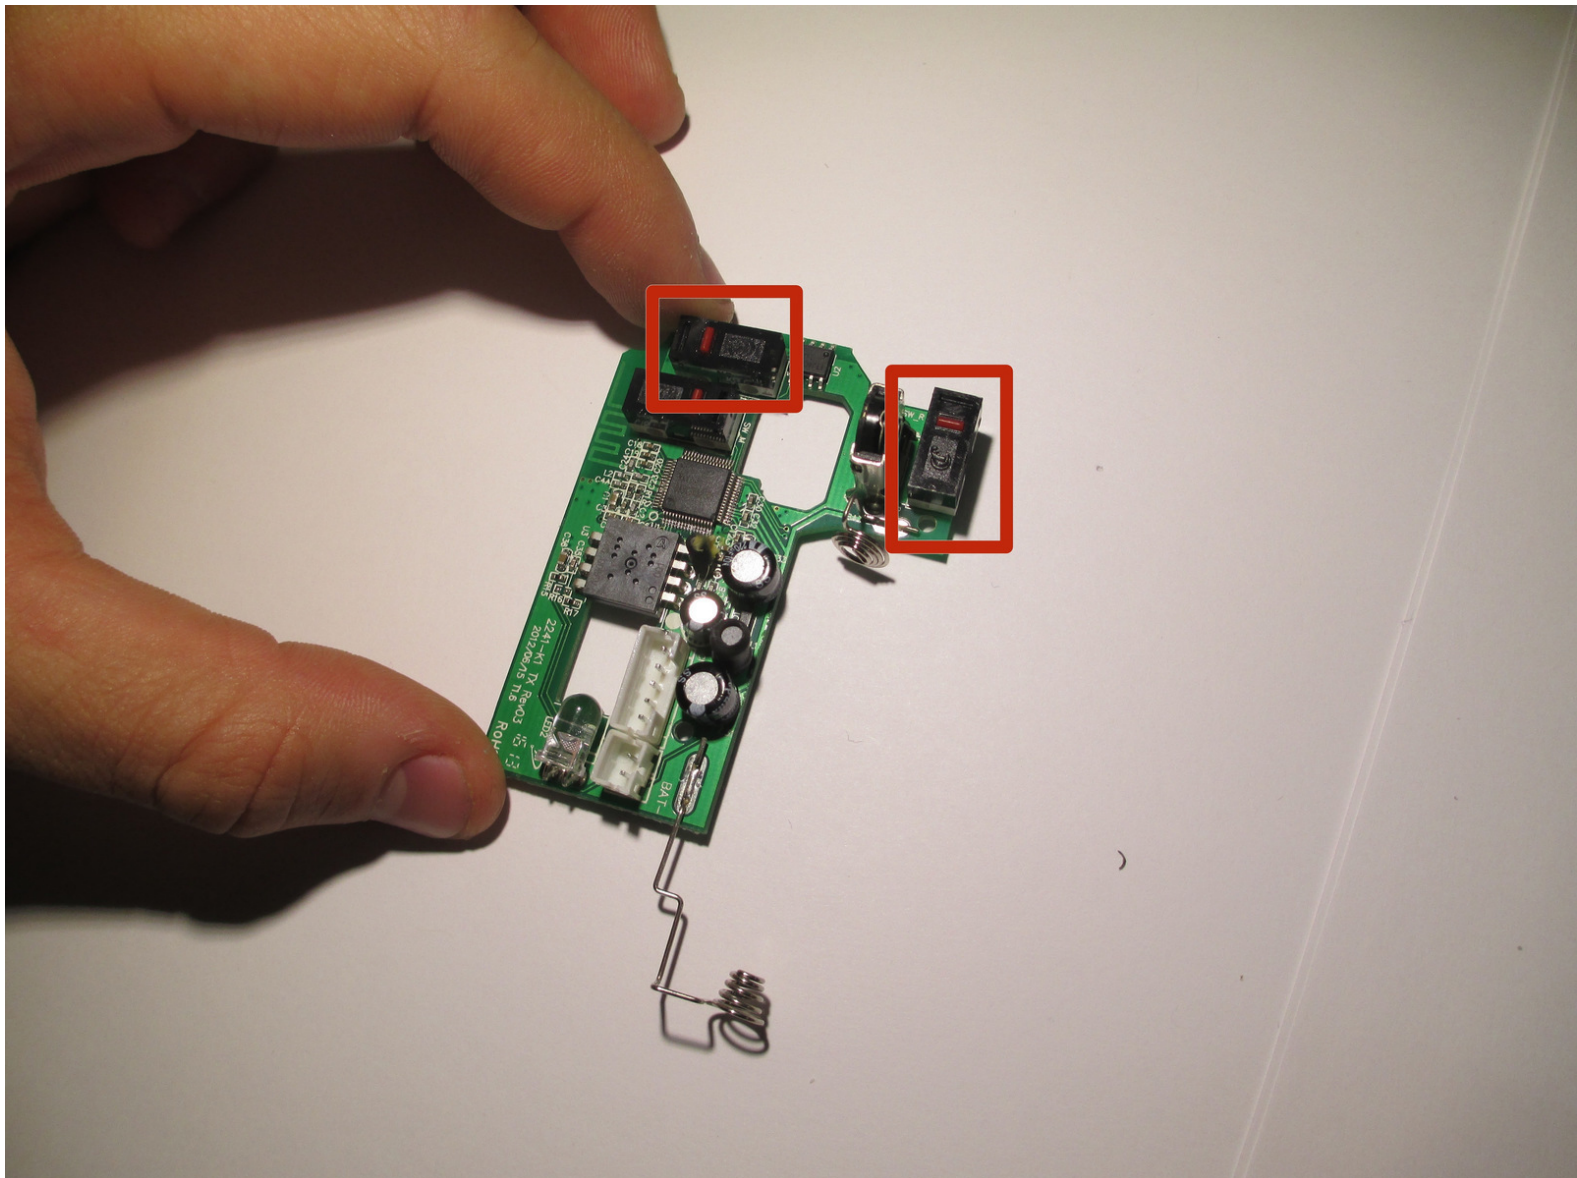

## INTRODUCTION

Here's how to take your mouse apart, and how to get the buttons working again.



### TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Soldering Station](#) (1)
- [Desoldering Braid](#) (1)



### PARTS:

- [Mouse buttons](#) (1)
-

## Step 1 — Left and Right Buttons



- Use the screwdriver to pry off the stickers marked in red to reveal the location of 4 screws.

## Step 2



- Remove the 4 screws marked in red.



## Step 3




- Use a flat head screw driver to pry apart the upper and lower housing of the mouse.


## Step 4




- Pull the wires from the white crimping headers to disconnect them, separating the top from bottom.

 Pull as far up on the wire as possible, but be careful to avoid ripping the wires.


## Step 5

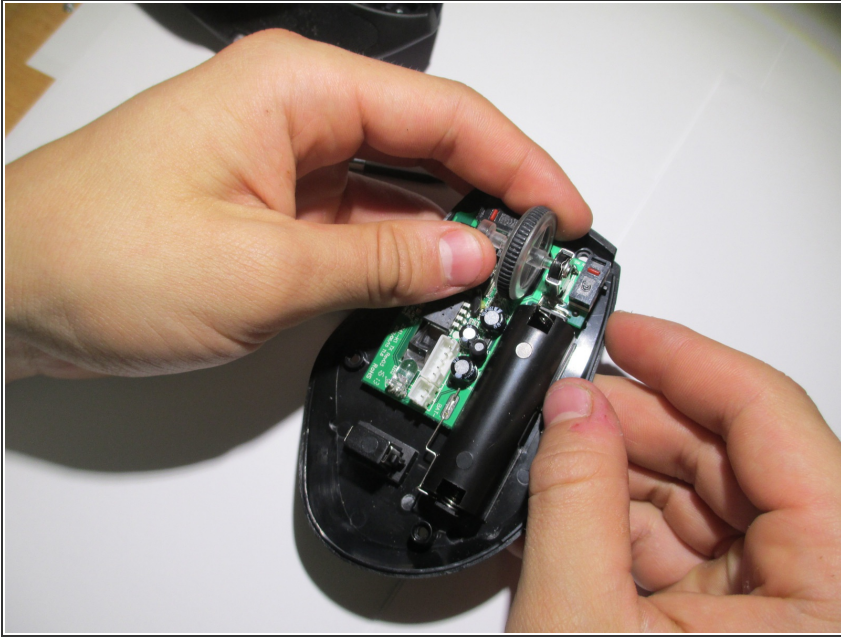

- Scroll wheel, left and right buttons
- Remove the scroll wheel from the motherboard by pulling it to the left.

 This may take some force to remove. Make sure to pull it parallel to the board, instead of perpendicularly.



## Step 6

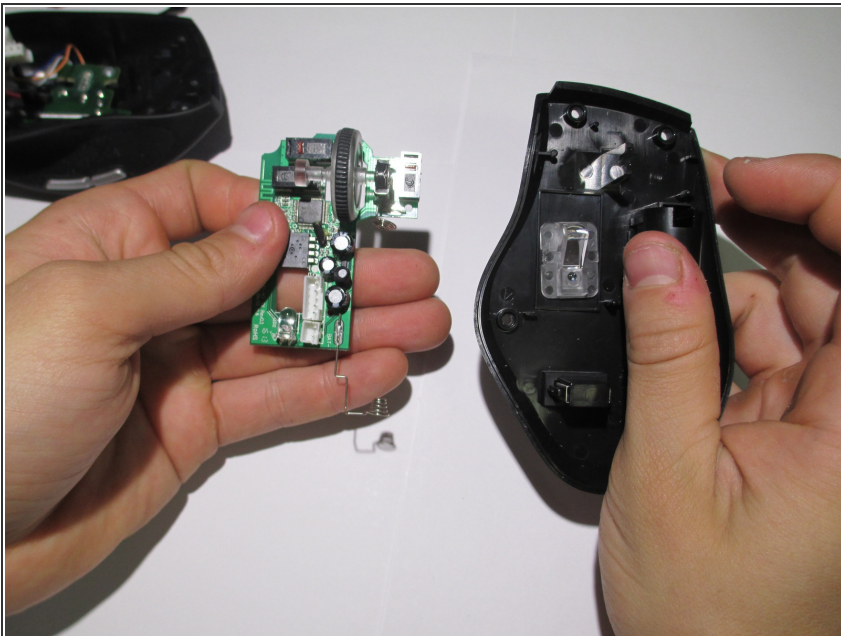

- Pull the motherboard, gently, away from the plastic housing.



## Step 7

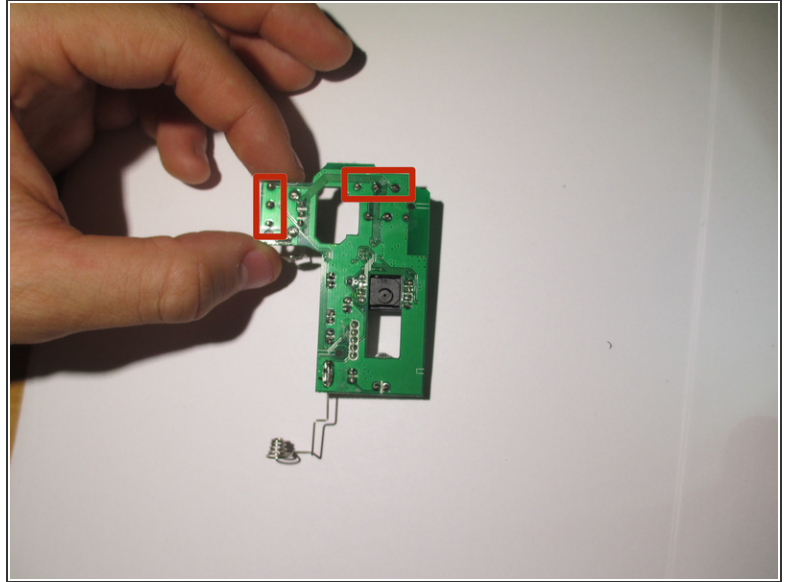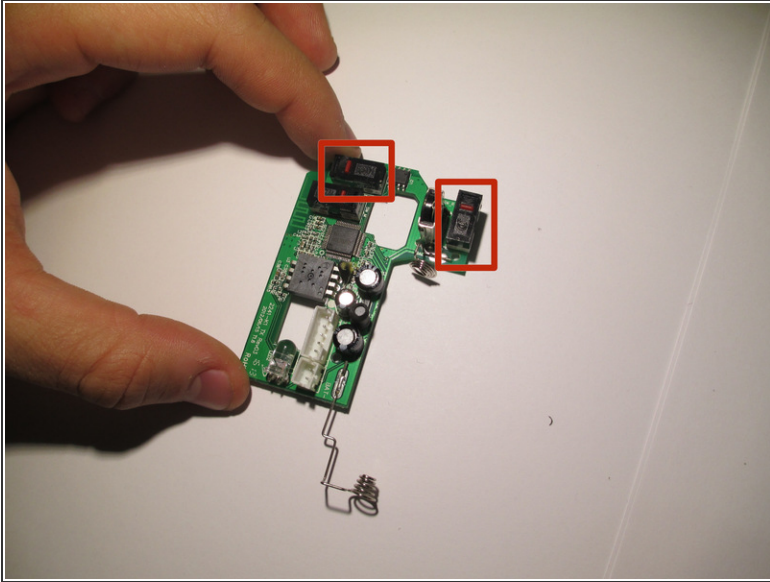

- Desolder these components and replace them in order to repair the left and right button.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 10:05:27 AM.